



CHANGING THE AIR CONDITIONER FILTER

B145A01NF-AAT
**(For Evaporator and Blower Unit)
(If Installed)**


The air conditioner filter is located in the right side of the instrument panel. It helps to decrease the amount of pollutants entering the car.

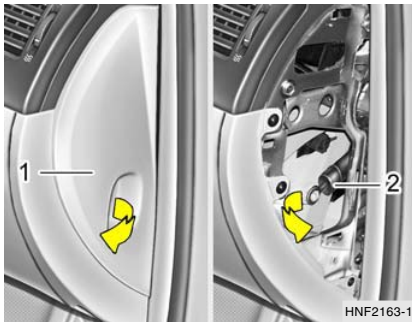

1. Remove the cover (1) which is located to the right side of the instrument panel by pulling it.
2. Pull the glove box cylinder (2) to unlock the glove box retainer.

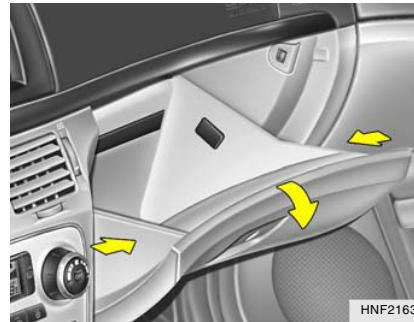

3. Lower the glove box down completely by pushing both sides of the glove box inward.

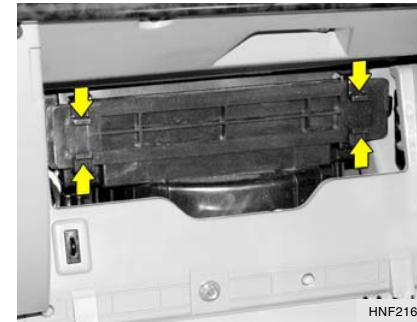

4. Remove the air conditioner filter cover by pressing both side clips.

CAUTION:
Be careful not to damage filter fixing clips.